


Miele

Operating and installation instructions

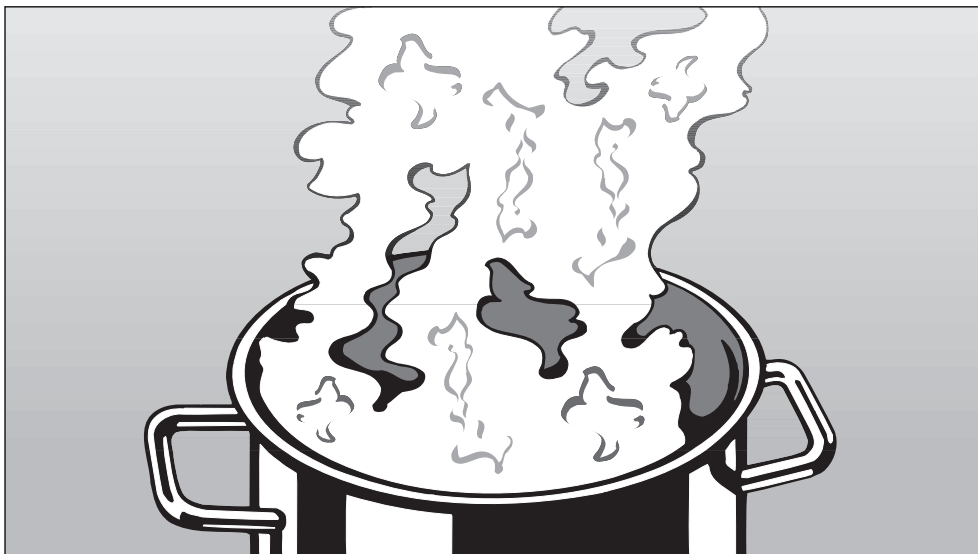





Cooker hood DA 7090 W

To avoid the risk of accidents or damage to this appliance, it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 09 315 850

Contents

Caring for the environment	3
Warning and Safety instructions	4
Guide to the appliance	8
Mode of operation	10
Miele@home	11
Con@ctivity	11
Operation	12
To switch the fan on ①	12
To select a power level	12
Run-on option "5  15"	13
To switch the fan off ①	13
Hob lighting 	13
Operating hours counter  	14
Sensor tones	16
Safety switch-off after 10 hours	16
Cleaning and care	17
Housing	17
Grease filters	17
Resetting the Grease filter operating hours counter	18
Fitting and replacing the charcoal filters	19
Resetting the Charcoal filter operating hours counter	20
Changing a halogen lamp	21
After Sales Service	22
Appliance dimensions	23
Safety distance between hob and cooker hood (S on the installation drawing)	23
Installation	24
Installation accessories	24
Installation instructions	24
Electrical connection	25
Technical data	26


Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Packaging e.g. cling film, polystyrene and plastic wrappings must be kept out of the reach of babies and young children. Danger of suffocation!

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

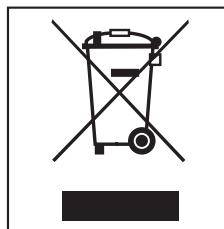

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

Warning and Safety instructions

This appliance complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important information on safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

Correct application

► This appliance is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:

- Shops
- Offices and showrooms

and by residents in establishments such as:

- Hostels and guest houses.

► It must only be used as a domestic appliance to extract vapours and remove odours from cooking.

► The cooker hood is not intended for outdoor use.

Any other usage is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation of the appliance.

► This appliance is not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it correctly by a person responsible for their safety.

Safety with children

► This appliance is only intended for use by adults who have read these instructions.

► This appliance is not a toy! To prevent the risk of injury do not let children play with the appliance or its controls.

► Children under 8 years of age must be kept away from the cooker hood unless they are constantly supervised.

► Children 8 years and older may use the cooker hood only if they have been shown how to use it in a safe way and understand the hazards involved.

► Please be aware that on cooker hoods with halogen lighting, the lamps will get very hot during use and remain hot for some time after switching off. To safeguard against burning, keep children well away from the lamps at all times.

Technical safety

► Before installation, check the cooker hood for visible signs of damage. Under no circumstances should you install or use a damaged appliance. It could be dangerous.

► Before connecting the appliance to the mains supply, make sure that the voltage and frequency details given on the data plate correspond with the household electricity supply, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.

► The electrical safety of this appliance can only be guaranteed if correctly earthed. It is most important that this basic safety requirement is observed and tested regularly, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

► Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

► For safety reasons, this appliance may only be used when it has been fully installed.

► Only open the housing as described in the instructions given in the installation sheet and in the Cleaning and care section of this booklet. Under no circumstances should any other parts of the housing be opened. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user, and can cause operational faults.

► Installation, maintenance and repairs may only be carried out by a service technician authorised by the manufacturer in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure that current is not supplied to the appliance until after maintenance or repair work has been carried out.

► Faulty components must only be replaced by genuine Miele original parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

► During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply.

Warning and Safety instructions

- ▶ This appliance must not be used in a non-stationary location (e.g. on a ship).
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Correct use

- ▶ Never use an open flame beneath the cooker hood. To avoid the danger of fire, do not flambé or grill over an open flame.
When switched on, the cooker hood could draw flames into the filter. Fat particles drawn into the cooker hood present a fire hazard.
- ▶ When using the cooker hood over a gas hob, ensure that any burners in use are always covered by a pan. Switch the cooking zone off when a pan is removed, even for a short time. Regulate the flame so that it does not burn up the sides of the pan. Do not allow the pans to overheat excessively (e.g. when using a wok). The cooker hood can become damaged when exposed to excessive heat.
- ▶ Always switch the cooker hood on when using the hob, otherwise condensation may collect in the hood, which could cause corrosion.
- ▶ When cooking with oil or fat, chip pans and deep fat fryers etc, do not leave the pans unattended. Never leave an open grill unattended when grilling. Overheated oil and fat can ignite and could set the cooker hood on fire.

Warning and Safety instructions

► Do not use the cooker hood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.

► The filters should be regularly cleaned or changed as appropriate. Saturated filters are a fire hazard. See "Cleaning and care".

► The cooker hood can get very hot during cooking due to heat rising from the hob.
Do not touch the housing or the grease filters until the cooker hood has cooled down.

► Do not use a steam-cleaner to clean this appliance. Steam could reach the electrical components and cause a short circuit.

Correct installation

► Refer to the cooker or hob manufacturer's instructions as to whether a cooker hood may be operated above the cooker/hob.

► The minimum safety distances between the top of the cooker or hob and the bottom of the cooker hood given in the "Appliance dimensions" section of this booklet must be maintained, unless the hob manufacturer states that a greater safety distance is required.

If more than one cooking appliance is fitted beneath the cooker hood, and they have different minimum safety distances to the cooker hood, select the greater distance.




► Safety regulations prohibit the fitting of a cooker hood over solid fuel stoves.

Accessories

► Only use genuine Miele original spare parts and accessories with this appliance. Using spare parts or accessories from other manufacturers will invalidate the guarantee, and Miele cannot accept liability.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Guide to the appliance

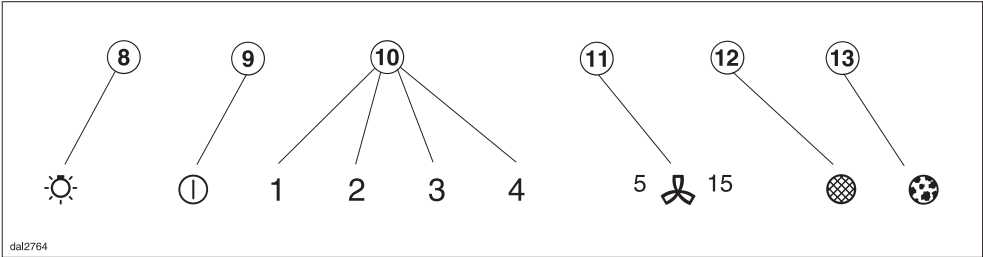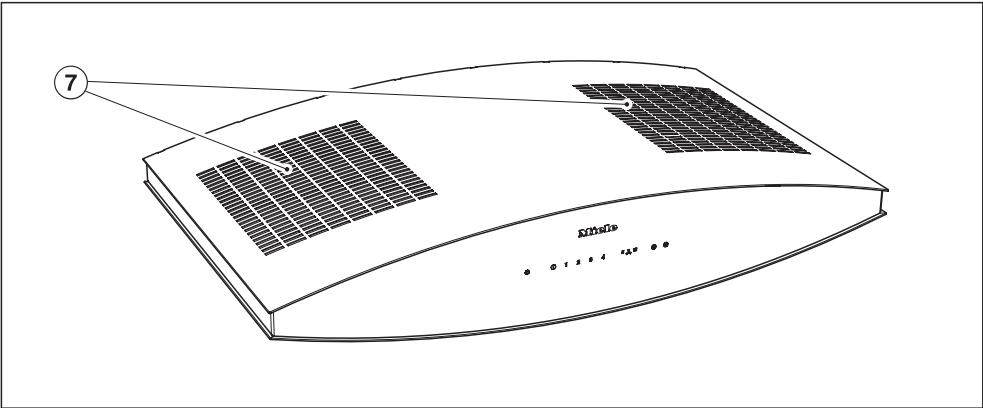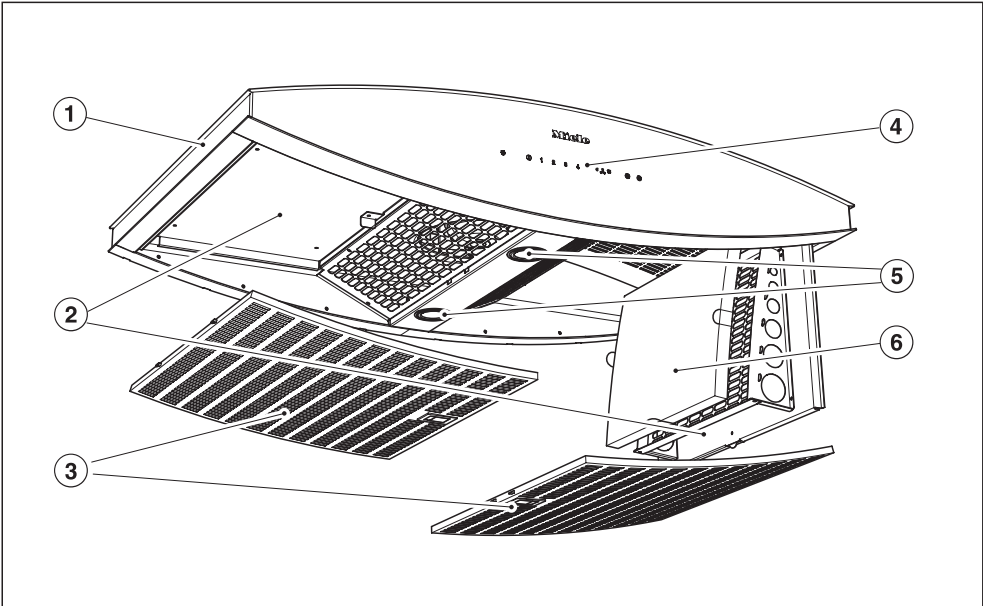

dal2764

① Canopy

② Holders for the charcoal filters

③ Grease filters

④ Controls

The symbols act as sensors. Touch the sensors to select the function you require.

An audible tone sounds briefly to confirm selection.

⑤ Hob lighting

⑥ Charcoal filters (2)

⑦ Air outlet grilles

⑧ Sensor for the hob lighting

This sensor can be used to switch the hob lighting on and off and is also a dimmer switch.

⑨ Sensor for switching the fan on and off

⑩ Sensors for selecting the fan power level

⑪ Sensor for the run-on option

This sensor activates the run-on option. The fan can be set to switch off automatically after either 5 or 15 minutes.

⑫ Sensor for the grease filters

The sensor lights up when the grease filters need to be cleaned.

It is used to reset the operating hours counter every time the grease filters are cleaned (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

⑬ Sensor for the charcoal filters

The sensor lights up when the charcoal filters need to be cleaned. For this to happen, the operating hours counter needs to be activated before the appliance is used for the first time.

The sensor is used to reset the operating hours counter every time the charcoal filters are replaced (see "Cleaning and care").

It can also be used to check and alter the operating hours counter.

For information about using the appliance, see "Operation".

Mode of operation


The cooker hood works with air recirculation.

The air is drawn in and cleaned first by the grease filters and then by two **charcoal filters**. The cleaned air is then recirculated back into the kitchen through the grilles in the top of the cooker hood.

Before using the cooker hood for the first time, ensure that the active charcoal filters are in place, see "Cleaning and care".

Con@ctivity

This cooker hood is communication enabled.

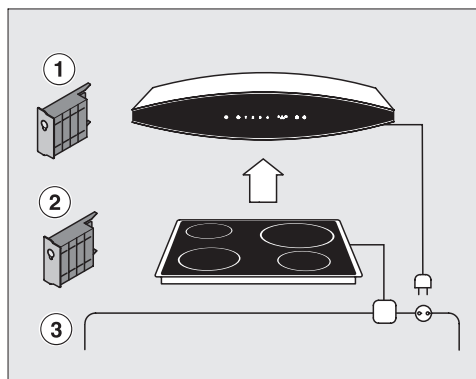

Communication module XKM 2000 DA ①, available as an optional extra, enables the operation of the cooker hood to be automatically controlled by the operating status of a Miele electric hob with onset controls.

For communication to take place, the hob must be fitted with the relevant hob communication module ②.

The hob transmits information about its operating status to the cooker hood via the household power supply (Powerline) ③.

- When the hob is switched on, the cooker hood hob lighting switches on and after a short time the cooker hood fan switches on.
- During cooking, the cooker hood automatically sets its power level according to the number of cooking zones in operation and their power levels.
- After the hob has been switched off, the cooker hood fan and hob lighting will switch off automatically after a period of time.

The communication module is fitted to the cooker hood in the area of the motor and is connected to the controls of the cooker hood.

The appliance specific control cabling set is also required.

For detailed information about this function and fitting instructions, please read the operating instructions for the XKM 2000 DA and the installation instructions for the control cabling set.

Installation must be carried out by a Miele service technician or suitably qualified electrician.

Communication module
XKM 2000 DA M.-Nr. 7 209 000

Control cabling set
DA 7090 W, 7000 D . . M.-Nr. 7 944 580

Operation

To switch the fan on ①

- Touch the On/Off sensor ①.

The fan will come on at power level **2**.
The On/Off sensor ① and the **2** sensor will light up.

To select a power level

Depending on the intensity of the cooking vapours, levels **1** to **3** are usually sufficient for normal cooking.




- Select the level you require by touching the **1**, **2** or **3** sensor.

Intensive setting


- For short periods of cooking food with intensive vapours and a strong aroma, e.g. when searing meat, you may wish to select level **4**, the Intensive setting.

Automatic switch-off of the Intensive setting

You can set the Intensive setting so that it always only runs for 10 minutes before reverting automatically to level **3**.

- To set this option, both the fan and the hob lighting must be switched off.
- Touch the Run-on sensor  for approx. 10 seconds until the **1** sensor lights up.
- Touch in turn
 - the Hob lighting sensor ,
 - the **1** sensor, and
 - the Hob lighting sensor  again.

If Automatic switch-off is not activated, the **1** and **4** sensors will flash.






- Touch the **4** sensor to activate Automatic switch-off.
The **1** and **4** sensors will now light up constantly.
Touch the **1** sensor to deactivate the Automatic switch-off function.
- Touch the Run-on sensor  to confirm your selection.

If you do not confirm within 4 minutes, the cooker hood will automatically revert to the original setting.

Run-on option "5 15"

It is advisable to leave the fan running for a few minutes after cooking has finished to neutralise any lingering odours in the air.

The fan can be set to switch off automatically after 5 or 15 minutes.

- After cooking has finished, touch the Run-on option sensor  whilst the fan is still running
 - Touch once = The fan will switch off after 5 minutes (5  will light up).
 - Touch twice = The fan will switch off after 15 minutes (15  will light up).
- If you touch the Run-on sensor  again, the fan remains on (5  15 goes out).


To switch the fan off ①

- Touch the On/Off sensor ① to switch the fan off.

Hob lighting

The hob lighting can be switched on and off independently of the fan.



To switch the hob lighting on


- Touch the Hob lighting sensor  briefly.

The lighting will switch on at maximum brightness.


To dim the hob lighting

The brightness of the hob lighting can be adjusted.

- With the hob lighting switched on, touch and keep your finger on the Hob lighting sensor .
The brightness will gradually dim until you release the sensor.
- To increase the brightness, touch and keep your finger on the Hob lighting sensor  again until the level required is reached, then release it.

If you keep your finger on the Hob lighting sensor , the lighting will continue to change between bright and dim.

To switch the hob lighting off

- Touch the Hob lighting sensor  briefly.


Operation

Operating hours counter

The number of hours the appliance has been in operation is stored in memory.

The operating hours counters tell you when the grease filters or charcoal filters need to be cleaned or replaced.

Grease filter operating hours counter

After 30 hours of operation (or another time if the operating hours counter has been altered), the Grease filter sensor  will light up.

The grease filters must then be cleaned and the operating hours counter reset (see "Cleaning and Care").

Altering the grease filter operating hours counter

You can set the operating hours counter to suit the type of cooking you do.




The operating hours counter is set at the factory for 30 hours.


Select a shorter time of 20 hours if you fry a lot.

If you only cook occasionally, we still recommend 20 hours because grease which has built up gradually over a long period of time will harden on the grease filters and make cleaning more difficult.

If you use very little fat for cooking, select a longer time of 40 or 50 hours.

To alter the operating time:

- Touch the On/Off sensor  to switch the fan off.
- Touch the Run-on sensor  and the Grease filter sensor  at the same time.

The Grease filter sensor  and one of the fan power level sensors **1** to **4** will flash.


Sensors **1** to **4** indicate the time set:

Sensor **1** = 20 hours

Sensor **2** = 30 hours

Sensor **3** = 40 hours

Sensor **4** = 50 hours



- Touch the **1** sensor to select a shorter time and the **4** sensor to select a longer time, until the time required has been set.
- Touch the Grease filter sensor  to confirm your selection.

All the sensors will go out.

If you do not confirm within 4 minutes, the cooker hood will automatically revert to the original setting.

Checking the grease filter operating hours counter

To check the percentage of time set already used:

- Touch the On/Off sensor  to switch the fan on.
- Touch and keep your finger on the Grease filter sensor .

One or more of sensors **1** to **4** will flash.


The number of flashing sensors indicates the percentage of the operating time which has already been used up.

Sensor **1** = 25 %

Sensors **1** and **2** = 50 %

Sensors **1** to **3** = 75 %

Sensors **1** to **4** = 100 %


- When you take your finger off the Grease filter sensor , the current fan setting will show.

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

Charcoal filter operating hours counter

On delivery, the operating hours counter for the charcoal filter is **deactivated**.




For recirculation mode, the operating hours counter needs to be set to suit the type of cooking you do.


The Charcoal filter sensor  will light up after the cooker hood has operated for the number of hours set.

- The charcoal filters must be replaced with new ones.

Afterwards, the operating hours counter will need to be reset (see "Cleaning and care").

Activating and altering the charcoal filter operating hours counter

- Touch the On/Off sensor  to switch the fan off.
- Touch the Run-on sensor  and the Charcoal filter sensor  at the same time.

The Charcoal filter sensor  and one of the fan power level sensors **1** to **4** will flash.

Sensors **1** to **4** indicate the time set:

Sensor **1** = 120 hours

Sensor **2** = 180 hours

Sensor **3** = 240 hours

Sensor **4** = Deactivated

- Touch the **1** sensor to select a shorter time and the **4** sensor to select a longer time, until the time required has been set.

Operation


- Confirm the selection by touching the Charcoal filter sensor .

All the sensors will go out.

If you do not confirm within 4 minutes, the cooker hood will automatically revert to the original setting.

Checking the charcoal filter operating hours counter

To check the percentage of time set already used:

- Touch the On/Off sensor ① to switch the fan on.
- Touch and keep your finger on the Charcoal filter sensor .

One or more of sensors **1** to **4** will flash.

The number of flashing sensors indicates the percentage of the operating time which has already been used up.


Sensor 1	=	25 %
Sensors 1 and 2	=	50 %
Sensors 1 to 3	=	75 %
Sensors 1 to 4	=	100 %

The number of operating hours used remains in the memory, even when the appliance is switched off or there is a power cut.

Sensor tones

When selecting a function with the sensors, an audible tone will sound briefly to confirm.

The audible tone can be deactivated.

- Touch the On/Off sensor ① to switch the fan off.
- Touch the **4** sensor and the Grease filter sensor  at the same time for approx. 5 seconds until a tone sounds briefly. The audible tone is now switched off for all functions.
- To reactivate the audible tone, repeat the above process.

After the cooker hood has been disconnected from the mains electricity supply or after a power cut, the audible tone is activated regardless of the last setting.


Safety switch-off after 10 hours


Should the cooker hood be left on, the fan will switch off automatically after 10 hours.

The hob lighting will remain on.

- You can switch the fan on again by touching the On/Off sensor ①.

A range of Miele branded cleaning and conditioning products is available to order from Miele (see back page for contact details) or from www.miele-shop.com.

 Before any cleaning or maintenance work is carried out, disconnect the cooker hood from the mains supply.

 Halogen lamps get very hot during use and remain hot for some time after being switched off. The hot lamps are also susceptible to damage from damp cleaning. Wait a few minutes after switching off before commencing cleaning.

Housing

The surfaces and controls are susceptible to scratches and abrasions. Please observe the following cleaning instructions.


- All external surfaces and controls can be cleaned using a Miele E-Cloth or with warm water and a little washing-up liquid applied with a well wrung-out soft sponge or cloth.
- Wipe the surfaces dry using a soft cloth.
- Glass surfaces can be cleaned with a proprietary cleaning agent for glass.


Do not use:


- cleaning agents containing soda, acids, chlorides or solvents,

- abrasive cleaning agents, e.g. powder cleaners or cream cleaners and abrasive sponges, as well as pot scourers or sponges which have been used previously with abrasive cleaning agents. These will damage the surface material.
- sharp metal tools,
- oven sprays.

Grease filters

The grease filters should be cleaned regularly (at least every 3-4 weeks) to avoid a build-up of grease, but always clean immediately if the Grease filter sensor  lights up.

 An oversaturated filter is a fire hazard.

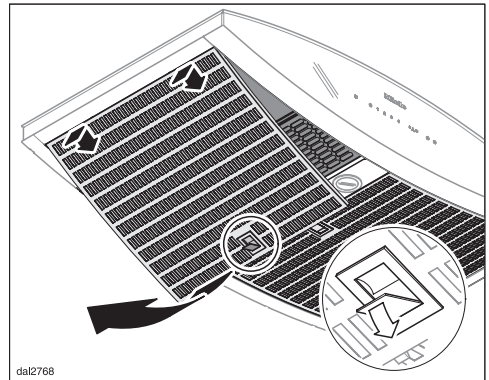

- To take out the filter, release the locking clip on the filter, lower the filter 45°, unhook and remove it.

To avoid damaging the filters or the hob below, make sure you hold the filters securely at all times when handling them.

Cleaning and care

Cleaning the grease filters by hand

- Clean the filters with a soft nylon brush in a mild solution of hot water and a little washing-up liquid. Do not use "neat" washing-up liquid.

Do not use:

- cleaning agents containing descaling agents,
- powder cleaners, cream cleaners or abrasive all-purpose cleaners.
- oven sprays.

Cleaning the grease filters in the dishwasher



- Place the filters with the short side upright in the lower basket, ensuring the spray arm is not obstructed.
- Do not wash at more than 65° C. If a Miele dishwasher is being used, select the Sensor wash programme.
- Use a mild dishwasher detergent.

Depending on the cleaning agent used, cleaning the filters in a dishwasher can cause permanent discolouration to the surface. However, this will not affect the functioning of the filters in any way.


- After cleaning, leave the filters to dry on an absorbent surface before replacing them.
- When removing the filters for cleaning, also clean the now accessible areas of the housing to prevent the risk of these catching fire. to prevent the risk of these catching fire.
- Replace the grease filters.

Resetting the Grease filter operating hours counter

After cleaning, the operating hours counter needs to be reset.

- Whilst the fan is switched on, touch the Grease filter sensor  for approx. 3 seconds until only the **1** sensor is flashing. The Grease filter sensor  will go out.

If you want to clean the grease filters **before** the operating hours counter has reached its maximum:

- Touch the Grease filter sensor  for approx. 6 seconds until only the **1** sensor is flashing.

Fitting and replacing the charcoal filters


The cooker hood uses two charcoal filters in addition to the grease filters. The charcoal filters absorb normal kitchen odours and are fitted in the canopy below the air outlet grilles.

New charcoal filters can be purchased from your Miele dealer, from the Miele Spare Parts Department or www.miele-shop.com. See back cover for contact details, and "Technical data" for the model number of the filter.


- Before fitting or replacing the charcoal filters, the grease filters must first be taken out (see previous section for instructions on how to do this).

The holders for the charcoal filters are located on the left and right hand sides of the housing.

Carry out the following steps for both sides:

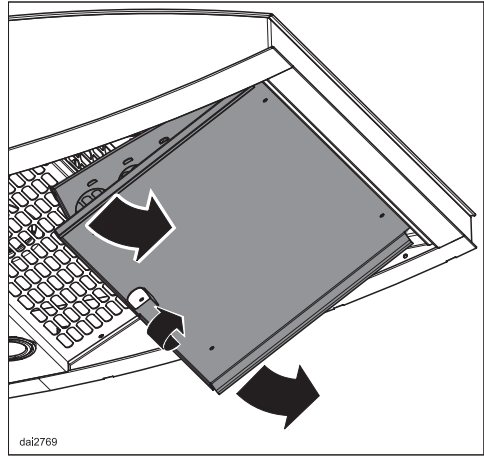

- Open the clip and pull the holder downwards.
- Unwrap the charcoal filter.

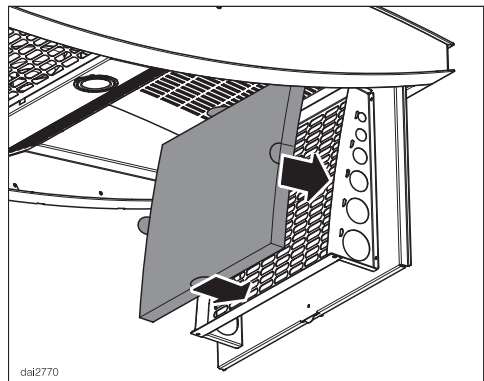

- Place the charcoal filter in the holder.
- Close the holder again.

When fitting for the first time:

- Activate the operating hours counter (see "Operation").

Cleaning and care

Always replace the charcoal filters immediately if

- the Charcoal filter sensor  lights up

or


- they are no longer effective at absorbing kitchen odours.


They should, however, be replaced at least every 12 months.

Used charcoal filters can be disposed of with normal household waste.


Resetting the Charcoal filter operating hours counter

After replacing the charcoal filter, the operating hours counter needs to be reset.

- Whilst the fan is switched on, touch the Charcoal filter sensor  for approx. 3 seconds until only the **1** sensor is flashing.


The Charcoal filter sensor  will go out.



If you want to change the charcoal filter **before** the operating hours counter has reached its maximum:

- Touch the Charcoal filter sensor  for approx. 6 seconds until only the **1** sensor is flashing.

Changing a halogen lamp

- Before any cleaning or maintenance work, disconnect the cooker hood from the mains supply.

 Exercise caution when changing halogen lamps. They get very hot during use and remain hot for some time after being switched off. Let them cool down before you change them.

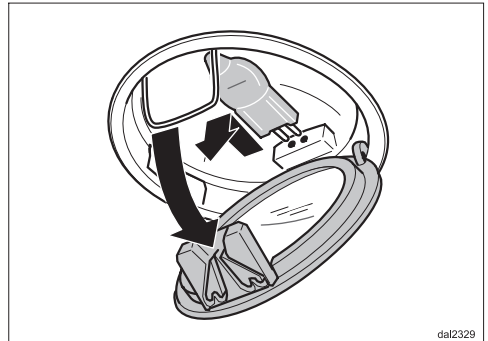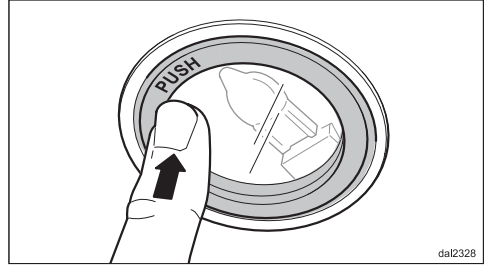

- To access the halogen lamp, push the lamp cover gently upwards. The cover will open and can be pulled down.
- Pull the old halogen lamp out of the connection socket.
- Using a cloth or glove, push the new lamp (12 V, 20 W, G4 cap) carefully into the connection socket. Please follow the manufacturer's instructions.
- Push the cover back up and make sure it clicks into place.

After Sales Service

In the event of a fault which you cannot correct yourself, or if the appliance is under guarantee, please contact:

- Your Miele Dealer / Chartered Agent or
- The Miele Service Department (see back cover for address).

When contacting your Dealer or Miele, please quote the model and serial number of your appliance. These are shown on the data plate which is visible when the grease filter is removed.

For G.B.: Please note that telephone calls may be monitored and recorded for training purposes.



N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See back cover for contact details.

In the U.K. your appliance is guaranteed for 2 years from the date of purchase. To activate your cover call 0845 365 6640 or register online at www.miele.co.uk

Appliance dimensions

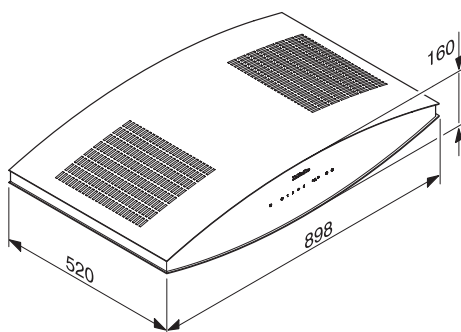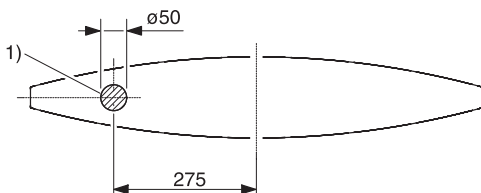

1) Cut-out for feeding through the mains connection cable


Safety distance between hob and cooker hood (S on the installation drawing)

When planning the installation height of your cooker hood, the **minimum** safety distance between the top of a cooker or hob and the bottom of the cooker hood are as follows, unless a greater distance is specified by the manufacturer of your cooking appliance:

450 mm above electric hobs and cookers
 650 mm above gas hobs and cookers
 650 mm above an open grill or deep fat fryer.

See "Warning and Safety" instructions for further information.


- When deciding on the safety distance between the hob and cooker hood, please note that a distance of 650 mm above electric cookers/hobs may be preferable to give more working space under the hood.
- Account should also be taken of the height of the person who will be using the hood most often. The person should have sufficient space to work comfortably at the hob, and also be able to reach the hood controls with ease.
- Please be aware that if positioned too high, extraction will be inefficient.

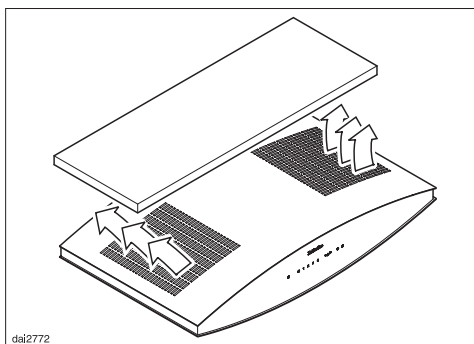

- Ensure that there is sufficient room above the outlet grilles to allow the air to be expelled unhindered. A distance of at least 300 mm must be maintained between the top of the appliance and the ceiling or any furniture units installed above the appliance.

Installation

 Installation accessories



2 screws 8 x 70 mm with

2 washers and

2 plugs 10 x 60 mm

for securing the appliance to the wall.

The screws and plugs are for use in concrete, aerated concrete, solid sand-lime brick, perforated brick and hollow block.


For other types of construction, alternative suitable fixings will be required.

Make sure the ceiling is strong enough to bear the weight of the cooker hood.


Before installation, it is important to read the information given on the following pages as well as the Appliance dimensions and the Warning and Safety instructions at the beginning of this booklet.

Installation instructions

See the enclosed Installation sheet for instructions on how to install this appliance.

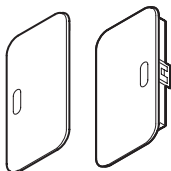

2 cover caps

 All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous, for which the manufacturer cannot be held liable.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.

The connection data is given on the data plate. (See "After Sales Service"). Ensure that this data matches the household mains supply.

Connection of this appliance should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the On-Off switch should be easily accessible after the appliance has been built in. When switched off there must be an all-pole contact gap of 3 mm in the switch (including switch, fuses and relays according to EN 60335).

If the switch is not accessible after installation (depending on country), an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD).

Important

This appliance is supplied for connection to an a.c. 230 V single phase 50 Hz supply.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow	= earth
Blue	= neutral
Brown	= live

WARNING:
THIS APPLIANCE MUST BE EARTHED

Technical data

Total connected load. 200 W
– Fan motor 160 W
– Hob lighting 2 x 20 W
Voltage AC 230 V
Frequency 50 Hz
Fuse rating 5 A
Weight. 20 kg

**Fan performance according to
EN 61591**

Recirculation power with charcoal
filters:
Level 1 180 m³/h
Level 2 250 m³/h
Level 3 360 m³/h
Level 4 (Intensive setting) 550 m³/h

**Optional accessory for recirculation
mode:**

Miele charcoal filter set DKF 16-1.
Contains two charcoal filters.

United Kingdom

Miele Co. Ltd.

Fairacres, Marcham Road

Abingdon, Oxon, OX14 1TW

Tel: 0845 365 0555

Fax: 0845 365 0777

Customer Contact Centre Tel: 0845 365 6600

E-mail: info@miele.co.uk

Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.

ABN 96 005 635 398

1 Gilbert Park Drive, Knoxfield, VIC 3180

Tel: (03) 9764 7130, Fax: (03) 9764 7149

Internet: www.miele.com.au

China

Miele (Shanghai) Trading Ltd.

1-3 Floor, No. 82 Shi Men Yi Road

Jing' an District

200040 Shanghai, PRC

Tel: +86 21 6157 3500

Fax: +86 21 6157 3511

E-mail: mieleshanghai@cn.miele.com

Internet: www.miele.cn

Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place

23 Wang Tai Road

Kowloon Bay

Hong Kong

Tel: (852) 2610 1331

Fax: (852) 2610 1013

Email: mielehk@miele.com.hk

India

Miele India Pvt. Ltd.

Ground Floor, Copia Corporate Suites

Plot No. 9, Jasola

New Delhi - 110025

Tel: 011-46 900 000, Fax: 011-46 900 001

E-mail: customercare@miele.in

Internet: www.miele.in

Manufacturer: Germany - Miele & Cie. KG

Carl-Miele-Straße 29, 33332 Gütersloh



Ireland

Miele Ireland Ltd.

2024 Bianconi Avenue

Citywest Business Campus, Dublin 24

Tel: (01) 461 07 10, Fax: (01) 461 07 97

E-Mail: info@miele.ie, Internet: www.miele.ie

New Zealand

Miele New Zealand Limited

Unit L, 10-20 Sylvia Park Road

Mt. Wellington, 1060, Auckland, NZ

Internet: www.miele.co.nz

Singapore

Miele Southeast Asia

Miele Pte. Ltd.

163 Penang Road

04 - 02/03 Winsland House II

Singapore 238463

Tel: +65 6735 1191, Fax: +65 6735 1161

E-Mail: infosea@miele.com.sg

Internet: www.miele.sg

South Africa

Miele (Pty) Ltd

63 Peter Place, Bryanston 2194

P.O. Box 69434, Bryanston 2021

Tel: +27 (0) 11 548-1900

Fax: +27 (0) 11 548-1935

E-mail: info@miele.co.za

Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.

P.O. Box 11 47 82

Gold & Diamond Park

Sheikh Zayed Road

Building 6 / Offices Nos. 6-214 to 6-220

Dubai

Tel: +971-4-341 84 44

Fax: +971-4-341 88 52

E-Mail: info@miele.ae

Internet: www.miele.ae